Traditional Dual Window Kettle
CTK17U

Cuisinart®

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. The appliance is not intended to be operated by means of external timer or separate remote-control system.
2. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should always be supervised to ensure that they do not play with this product.
4. Not for use by children. Keep out of reach of children during and after use.
5. The outer surface may get hot when the appliance is in use.
6. Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. Do not use this appliance if the lead is damaged. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to "UK After Sales Service section" for further information).

Congratulations on your purchase of your new Cuisinart Traditional Kettle.

For over 30 years Cuisinart's aim has been to produce the very finest kitchen equipment. All Cuisinart products are engineered for exceptionally long life, and designed to be easy to use as well as to give excellent performance day after day.

To learn more about our products visit our website www.cuisinart.co.uk

Contents

Product Description 5

Safety Cautions 6

Instructions For Use 9

Hints & Tips 10

Cleaning & Maintenance 10

UK Guarantee & After Sales Service 11

Product Description

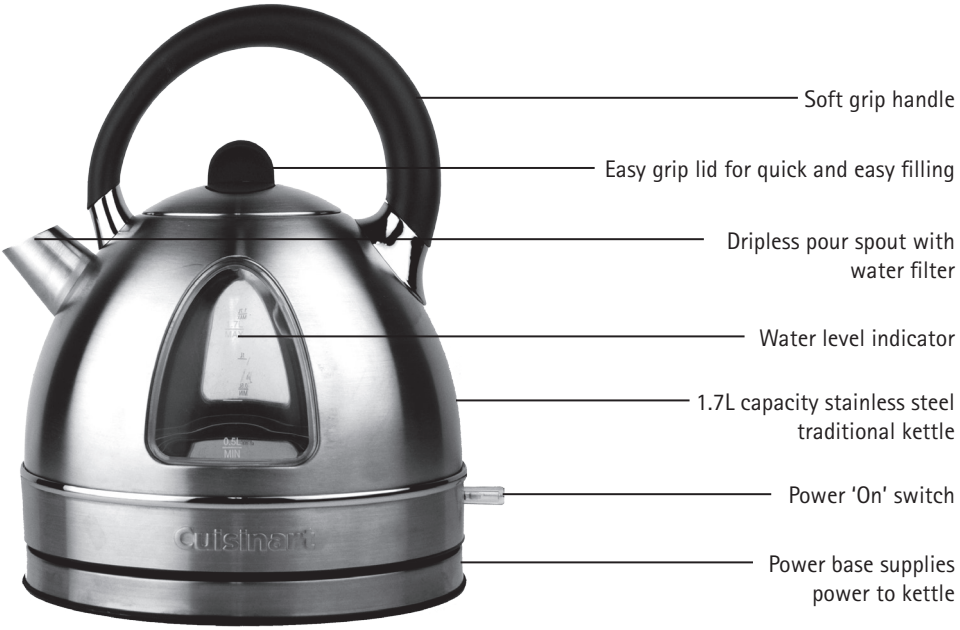
Soft grip handle
Easy grip lid for quick and easy filling
Dripless pour spout with water filter
Water level indicator
1.7L capacity stainless steel traditional kettle
Power 'On' switch
Power base supplies power to kettle
Cuisinart

Safety Cautions

Carefully read all the instructions before using the appliance and keep in a safe place for future reference

Always follow these safety cautions when using this appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described within this instruction book.

- Ensure all packaging materials and any promotional labels or stickers are removed from the Traditional Kettle before first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use this appliance if the lead is damaged. In the event of lead damage discontinue use immediately. If the lead is damaged it must be replaced with a special lead available from the manufacturer or its service agent. (See 'UK After Sales Service').
- Whilst in use the surfaces will become extremely hot. Do not touch hot surfaces. Always use handles.
- Unplug from the mains when not in use and before cleaning. Allow to cool before cleaning the appliance. To disconnect, turn the switch off and then remove the plug from the mains.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should always be supervised to ensure that they do not play with this product.
- Not for use by children. Keep out of reach of children during and after use.
- Do not use any accessories or attachments with this appliance other than those recommended by Cuisinart.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or unit in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.

- For indoor, domestic use only.
- This appliance should be used only for preparation of food as described within the instructions for use that accompany it. Please retain these instructions for further use.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.
- To avoid injury or possible fire, do not cover the appliance when in use.
- Do not connect this appliance to an external timer or remote control system.
- This appliance complies with the basic requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Safety of domestic electrical appliances).

WARNING: Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. These bags are not toys.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to an appropriate collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

UK Wiring Instructions

The wires in the mains lead are coloured in accordance with the following code:

- BLUE = NEUTRAL
- BROWN = LIVE
- YELLOW & GREEN = EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L
- The wire which is coloured YELLOW & GREEN must be connected to the terminal which is marked with the letter E or the ⏚ symbol

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 13A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 13A fuse must be fitted.

Instructions For Use

- Before using for the first time we recommend operating the kettle 2 or 3 times. Fill to the MAX marked fill level, bring to the boil and when boiling has finished and the kettle has switched off, discard the water and rinse out the inside. This will remove any dust or residue remaining from its manufacture.
- Position the kettle on a flat sturdy surface with the spout facing away from you. Gently lift off the lid, whilst holding the handle.
- Fill the kettle with the required amount of cold water, the water gauge is either side of the kettle and is marked with min and max, please take care not to exceed the max mark as this may cause spitting from the spout when boiling.
- Position the kettle with the spout facing away from you. Replace lid on kettle.
- Align the kettle over the powerbase and gently lower it into position, it will find its own way and sit firmly on the base.
- Switch the kettle on by pressing down the power 'On' switch at the rear of the kettle, you will hear a slight click and the switch will illuminate with a blue LED.
- The kettle will switch off automatically when it has completed the boil, however, the kettle can be switched off at any time by simply lifting the power 'On' switch in an upwardly direction, the LED will switch off and the same click will be heard as switching on.
- Pour water out slowly. Return kettle to base after pouring. If you wish to re-boil the water, you must depress the power 'On' switch again.

N.B. A couple of water droplets or condensation may appear on the powerbase, this is quite normal and not a leak.

N.B. Do not remove the lid of the kettle when pouring, escaping steam may scald.

- Once the kettle is re-located on the powerbase it can be switched on again at any time, if the switch will not stay down it means the control is still a little warm, this is normal and it will simply re-set itself in a few seconds when cooled and will be ready to boil again.

N.B If the kettle is accidentally switched on without a sufficient water level, a boil dry mechanism will automatically switch the kettle off.

Hints & Tips

- Always use fresh, cold water each time you boil.
- As soon as the kettle boils, pour the water into your ceramic pot or cup directly onto tea. The tea should be allowed to steep for 3 to 5 minutes. The longer it steeps the stronger it is. For iced tea, brew tea double-strength (steep twice as long) and pour over ice. Stir and serve.

N.B. For your safety, always ensure the lid is on properly when the kettle is in use.

- Empty the kettle after each use. Do not leave water standing in the kettle.

Cleaning & Maintenance

- Always unplug the appliance from the mains outlet before cleaning.
- Allow to cool before cleaning the appliance.
- Clean the exterior surface of the kettle with a clean damp cloth to preserve its original highly polished finish. Dry and polish with a soft cloth.
- Clean the water filter with a soft, clean, damp cloth once a month or as necessary.
- Do not use abrasive cleaners or scouring agents of any kind on the interior or exterior of the kettle.

Warning! Do not immerse the kettle or power base in water or other liquid. Ensure the electric kettle socket is kept dry.

- To get the best performance from your Cuisinart Stainless Steel Traditional Kettle, we recommend descaling it from time to time. Frequency depends on the hardness of your tap water and how often you use your kettle.
- We suggest use of a kettle descaler in order to dissolve the scale. Simply follow the manufacturer's guidelines on the packaging. Alternatively pour in enough white vinegar to cover the bottom of the jug by about 2cm. Bring the vinegar to the boil; you may need to repeat this several times with cooled vinegar to remove the build-up completely. When the kettle is descaled, empty the kettle and rinse out several times with clean water. Take care not to inhale fumes.

UK Guarantee

This Cuisinart appliance is guaranteed for consumer use for 3 years. This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. No responsibility will be accepted for any damage caused in transit. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK After Sales Service

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 03702 406902 (09:00 to 17:00 Monday to Friday) or email your enquiry to support@cuisinart.co.uk

The return address is:

Customer Care Centre
Conair Logistics
Unit 4 Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

www.cuisinart.co.uk

IB-11/192E